
martor

TECHNICAL DATA SHEET

SECUNORM 525 NO. 525001

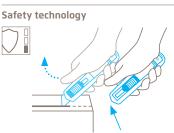

Automatic blade retraction – a high degree of safety

The automatic blade retraction of the SECUNORM 525 guarantees a high degree of safety from cut injuries. As soon as you have started to cut, take your thumb off the slider. Then the blade will retract into the handle immediately after leaving the material being cut.



ROBUST SAFETY KNIFE WITH AN CUTTING DEPTH OF 18 MM AND AUTOMATIC BLADE RETRACTION.

Order No. 525001.17

A versatile helper – with great qualities. With ceramic blade. The SECUNORM 525 is a straightforward safety knife in every way. The robust and ergonomic aluminium handle sits firmly and comfortably in the hand. The combination of the durable sharpness of a ceramic blade and a cutting depth of up to 18 mm means the SECUNORM 525 easily manages a variety of cutting materials. An unobstructed view of the blade also particularly enables a precision cut. In every task, the proven automatic blade retraction protects you from cutting injuries.

Robust handle

The aluminium handle is already familiar from the SECUNORM PROFI25. The handle and a newly developed plastic insert form a perfect team to ensure that your SECUNORM 525 is equipped to meet even the toughest tasks.

Optimised slider

A firm hold and grip are typical MARTOR characteristics. The SECUNORM 525 is no different. Its slider has a grooved structure and is especially large giving the ideal conditions for comfortable, "hands-on" work – even when wearing gloves.

Safe blade change


The blade change button gives easy access to the blade, which you can now turn or replace. A further practical feature is that the blade cover can be lifted and locked in an open position.


Large cutting depth

The cutting depth is ideal for cardboard, film, strapping bands and much more. But the SECUNORM 525 is not only very versatile, it can also be relied on for high frequency cutting tasks.

Secure hold


For secure fastening, the SECUNORM 525 is equipped with a practical lanyard hole, another reason why it could become a constant companion. You then reduce risks two-fold: the risk of loss and the risk of cutting injuries.

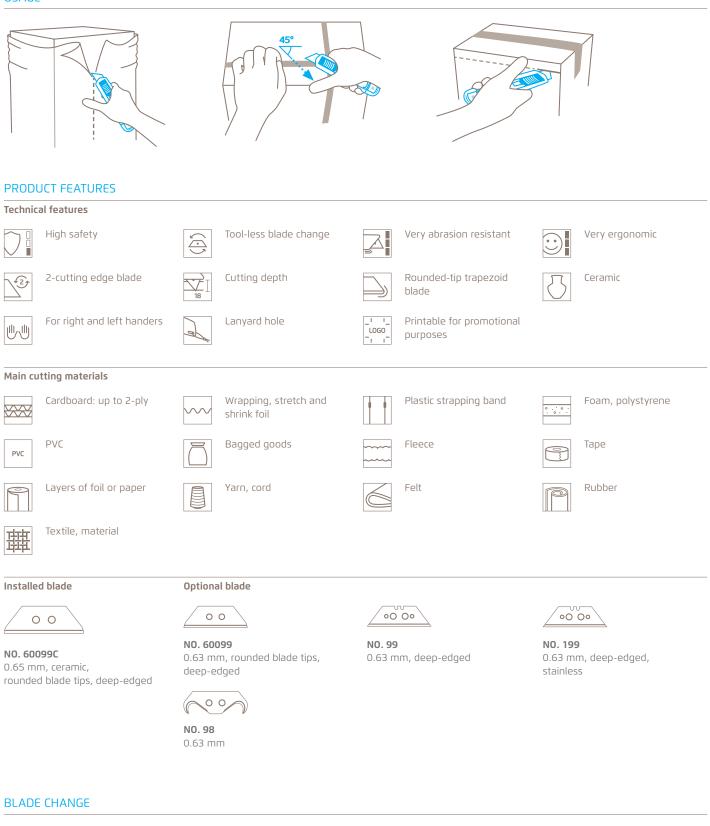




Press the blade change button **pushing up from below** and remove the plastic insert from the rear of the handle.


martor



Hold the **blunt** side of the blade and use it to lift the blade cover upwards. The cover remains in the open position.



Reverse or replace the blade. Make sure you place the blade **exactly on the locating lobes**.



Close the blade cover and push the plastic insert back into the handle and then **press down** on the blade change button.

SERVICES OFFERED

Safety poster

Γ

Technical data sheet

Consulting service

PRODUCT AND PACKAGING DETAILS

Order No.	NO. 525001.17
Knife size (L x W x H)	143 x 17 x 31 mm
Weight knife	80.4 g
Basic material	Aluminium
Cutting depth	18 mm

Packaging unit	1 in single unit box
Size Single unit box	153 x 21 x 37 mm
Weight single unit box	92.5 g
EAN Code single unit box	4002632802690
Quantity in outer pack	10 knives
Size outer pack	114 x 78 x 156 mm
Weight outer pack	980.0 g
EAN Code outer pack	4002632852695
Customs tariff number	69149000

SAFETY CERTIFICATE

Date of issue	11.05.2020	Certificates and awards
Certification	GS certificate NO. 179480-7120-55094-2020	
		reddot winner 2021

SAFETY ADVICE

To ensure that you use your new MARTOR knife safely and most effectively, please read and note the following user-instructions. Please keep the written guide in a safe place so that you can access it at any time.

1. General application instructions: Please always use the product carefully for manual cutting work only and not for any purposes other than those that are intended. Please take the correct handling and the proper use of the knives into account in this regard. As an additional safety measure, we recommend the wearing of safe gloves.

2. Special application instructions to avoid the danger of injuries: Only use knives that are in perfect condition and have sharp, clean and undamaged MARTOR blades. Employ the utmost care when handling the knives. Prior to use, familiarise yourself with the safety features and their functioning. Ensure that these safety features are not impaired by the type of material to be cut. CAUTION: The blade is sharp and can result in serious and deep cuts. Therefore, never reach into the blade! Do not place your free hand in the line of cutting and never cut directly towards you.

3. Replacement of spare parts: Replace any blades that become dull at the right time! Use only the replacement blades from MARTOR for this purpose. Dispose of old blades in a

proper fashion. They should not be placed in a waste paper bin, as this poses a considerable danger of injuries. Never perform any repairs yourself. If the knife shows signs of aging or any other wear, e.g. which impair safety features, blade changing or usage, the knife must be taken out of service and replaced. Do not modify this product in any way. Modifications of any kind may impair product safety. CAUTION: The risk of injury caused by manipulation of this product is extremely high.

4. Non-use of the knife: Always secure the blade in such a way (depending on product type) that injuries due to cuts are excluded. Store the knife in a secure place.

5. Care instructions: To guarantee a long service life, always keep the knife clean and do not expose it to unnecessary soiling and humidity.

CAUTION: No liability will be assumed for consequential losses. Subject to technical changes and errors! This knife does not belong in the hands of children!

BELT HOLSTER S WITH CLIP NO. 9920	What do you do with your cutting tools when you are not actually using them? The MARTOR BELT HOLSTER S is a robust holder that allows you to carry all compact MARTOR knives as well as our safey scissors at all times. In addition, the com- partments are designed to allow you to load different tools: for example you can also carry a pen or a pack of blades. The MARTOR BELT HOLSTER is the ideal place to stow your tools safely when moving from A to B - and have them at hand, as soon as they are required.
HOLSTER SMALL NO. 9842	This blue plastic HOLSTER is just like the black version, only smaller. Use it to safely store and transport for ex- ample for the SECUNORM 500 or the SECUNORM 300. With this HOLSTER on your hip, your knife will always be within grasping range.
USED BLADE CON- TAINER NO. 9810	You can fill the USED BLADE CONTAINER with the content of your SAFEBOX. Or directly with your used blades. When the box is full, turn the lid until it shuts. Now the box cannot be reopened. The next step is to safely and completely dispose of the filled USED BLADE CONTAINER as normal waste.
WALL MOUNT BRACKET USED BLADE CONTAINER NO. 9845	Include it in your order now! With this mounting bracket you can fix your USED BLADE CONTAINER to a central location. Use the clamp and screws and nuts supplied with the prod- uct to attach it to either a pipe or a rod.
SAFEBOX NO. 108000	The SAFEBOX is large enough to store a large number of used blades safely. And at the same time, it is compact enough to carry with you. The two slits are not only used for filling, but also to "shorten" your snap-off blades. When your SAFEBOX is full, empty it into your USED BLADE CONTAINER.

MANUFACTURER

MARTOR KG | Lindgesfeld 28 | 42653 Solingen | Germany T +49 212 73870-0 | F +49 212 73870-90 | info@martor.de | www.martor.com